



Scoreboard Tips!

Steps for Setting Up the Scoreboard for the Night:

1. Turn on scoreboard at electrical box (managers do this)
2. Turn on controller (slide switch on side)
3. If the scoreboard is flashing all 1's, skip steps 4 and 5 and proceed to step 6
4. Press H+ key until scoreboard flashes all 1's or all 0's
5. Press G+ key until scoreboard flashes all 1's
6. Press horn key to lock your setup
7. Press New Game key

****YOU MIGHT NEED TO DO THIS MORE THAN ONE TIME**** (be patient it's gotta go to space and back ☺)

One remote controlling another board on a different field:

(the "dead" field get frustrated their remote isn't working. The indicator is you'll see an adjacent board with the same score, outs, strikes as the other affected scoreboard.)

What to Do:


1. Turn off both affected scoreboards and remotes.
2. Wait 30 seconds
3. Power on one score board and sync the remote. Then....
4. Power on the 2nd scoreboard and sync the remote.

They delay to a game is less than 5 minutes when u have to turn off their board and remote. Because the remotes aren't dedicated, they sometimes "catch" a nearby board when people are trying to sync at the same time especially when games are starting all at once.

Also remember: pressing harder doesn't fix the problem, it only ruins the keypad. ☺

Scoreboard On/Off Switch at Mahany

Scoreboard
on/off switch
power box

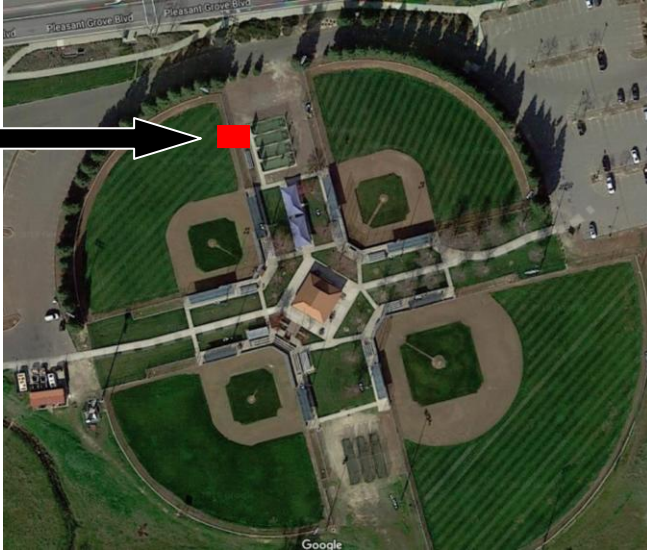

Score Board
on/off switch
power box



The scoreboard on/off switch is located in a control box next to field 2 by the 4 smaller batting cages at Mahany. It is the gray color metal box attached to the large green metal box noted above. The scoreboard control box has a lock on it. Your knaack box key will open the lock on the control box. The only time you will be opening this box is to turn on the scoreboard for your game. Currently, only Juniors, Majors and AAA will be using the score board. You must turn on the switch the get power to the score board to get it working. Each field is numbered at Mahany, and there are corresponding switches for each field number. If the switch is on already but the score board is not lit up, then it was not turned off by anyone. You will need to shut it off and then back on to get it working again. This switch is just to get power to the scoreboard. Next you will need to get a controller from the snack bar, follow the directions to sync the remote and then make sure it is working to control the score board.

Field Numbers

